



## Instructions for Shroud Assembly

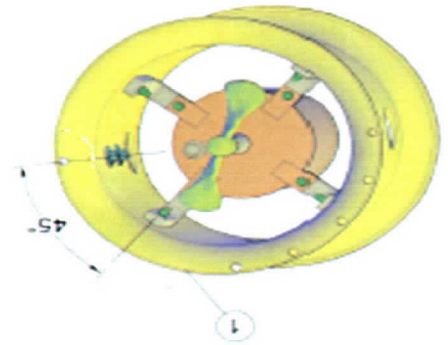

**Step 1:** Locate holes to be drilled at 45° from motor brackets. A second set of holes will be drilled directly across from the first set.

**Step 2:** Drill first hole at 6" from the bottom of the shroud. Drill a second hole 2½" vertically from the first hole. Use a 9/16" drill bit. After holes are drilled, attach bale to shroud using ½" clevis pins provided. Make sure the head of the clevis pin ends up on the outside of the shroud. Use washer & clip on the inside of the shroud.

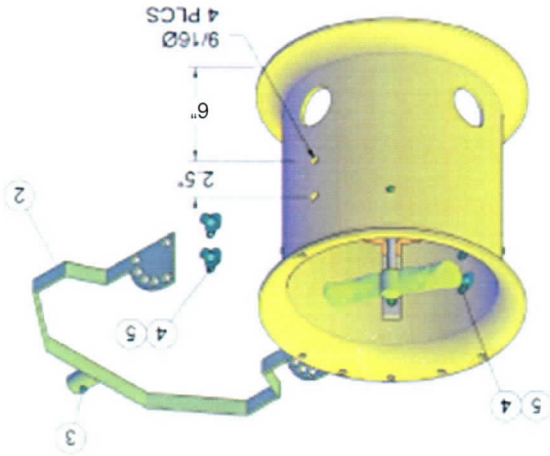

## Options for Dock or Pole Mounting

